




# EVK4 HD

## User's manual

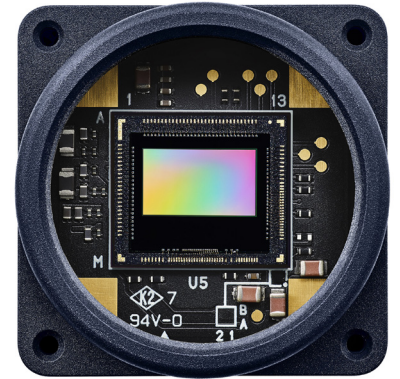

### Information on safe handling of PROPHESÉE products EVK4 HD

#### 1. For safety use

- This product is not waterproof or dustproof. If liquid such as water or metal pieces get into this product, stop using it immediately and remove this product from your computer;
- If the product is abnormally generating heat, smoking, or smelling strange odors, immediately stop using the product and shut down the computer;
- After that, after fully confirming that the abnormal condition of this product has subsided, remove it from your computer and contact the purchasing agent;
- Do not disassemble, modify or repair this product.  
It may cause electric shock or malfunction, and is not covered by the warranty in case of malfunction;
- Do not insert or remove the connector with wet hands;
- Do not use it in such a way that a large force is applied to the connector part;
- Handle the product with care so as not to drop it or hit it;
- If any obvious damage is found, discontinue use and remove this product from your computer.

#### 2. Please check the following before using

##### 2.1 Precautions for installation

- Connect to a USB port that can supply 5V 500mA or more;
- It is recommended to use the cable attached to this product as the USB cable. Depending on the cable length, it may not work;
- When replacing the lens, remove this product from the computer before replacing it;
- Do not apply excessive force to the lens or connector;
- This product has screw holes for fixing the camera, so please use it as needed.

##### 2.2 Precautions for use

- Do not touch the sensor surface with your finger;
- The application may not work properly depending on the environment and processing performance of your computer. For details, refer to the application manual;
- When removing this product from a computer, close the camera application before removing it;
- This product is for USB3.0 only.

##### 2.3 Guarantee

- The warranty period set by us is one year, and it is calculated from the date of purchase of this product;
- Within the warranty period, we will repair or replace this product free of charge only for failures that occur in the appropriate usage environment and usage.

##### 2.4 Repair, replacement

- Customers are responsible for shipping and customs duties when sending to us for repair or replacement.
- If the same model cannot be replaced, it may be replaced with another product that has the same or better performance than the product covered by the warranty.
- If you replace the product, we will not be able to return the old product or accessories that you sent, regardless of whether it is paid or free of charge.

**2.5 Disclaimer**

- Unless we have intentional or gross negligence regarding the failure of this product, our liability for damages shall be limited to the purchase price of this product.
- Our company is not liable for any consequential, incidental, indirect or mental damages, lost profits, or data damages caused by the failure of this product.

**3 Package contents**

**Prophesee EVK4 HD**


- EVK4 HD: 1
- USB3 Type C™ cable (1.2m): 1
- User’s manual (*this book*): 1

**Prophesee EVK4 HD Package (??)**

- EVK4 HD: 1
- USB3 Type C™ cable (1.2m) : 1
- Standard Lens : 1
- Mini Tripod: 1
- Plastic Case : 1
- User’s manual (*this book*): 1



**4 Product appearance**

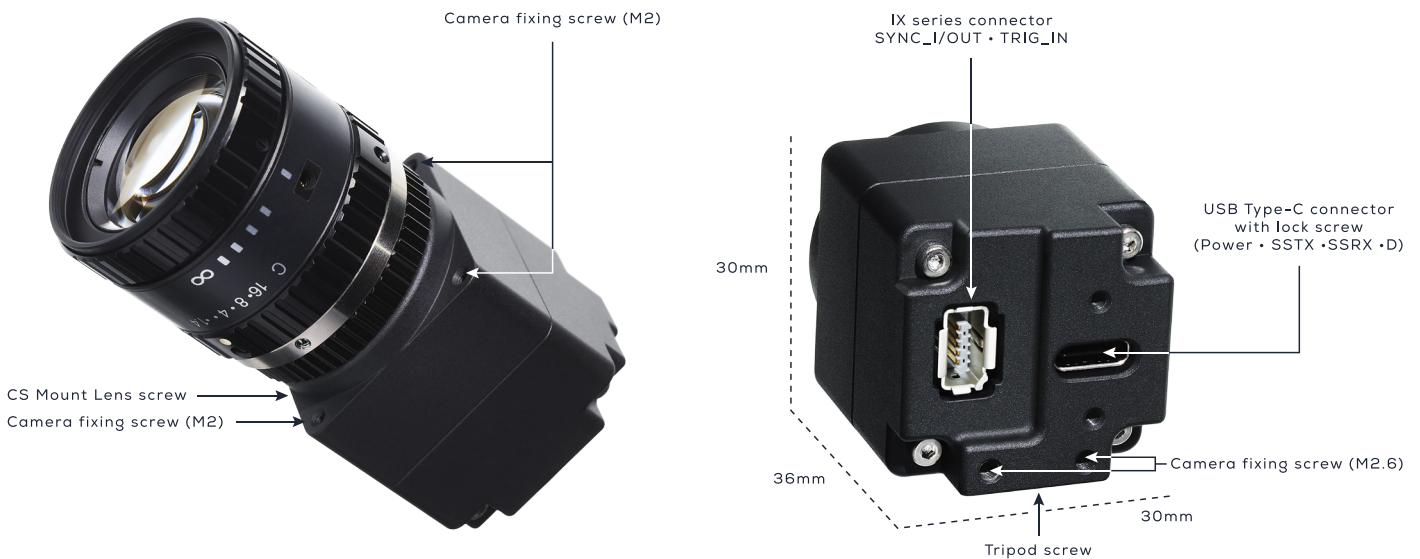

**5 Usage**

